Save and load a project backup

NEO series equipments with NEOc software





1. Description

This support manual contains information about how to download or load a backup project with NEOc software.

2. Objective

The aim of this document is to define a guide for download and load a project for the NEO series equipments.

Once the installation is finished, it's strongly recommended to do a backup copy of the project.

The next chapters detail the steps to be followed.



3. Get online with the equipment through NEOc

It's required to login NEOc configuration software using the following credentials:

- User: default
- Password: 1234

Once the software is opened, the equipment to be connected to must be searched.

NEO Configure	ator - Start	×
	NEW PROJECT	
	Search Devices	
	RECENT PROJECTS	
	Browse files	
	FIRMWARE	
Â	Update Devices Firmware	

After the equipment is found on the network, it is necessary to get connected to it. Select the equipment you are going to work with and click the button "Import System".

🔀 NEO Configura	tor - Search Devic	es					×
Assign 🖉	Unassign			_			
System Devices:	Export System	+ Add Device: NE	08060 • 192.	168.0.3	move Device		
Device Model	Description	IP Address	MAC	FW Version		Last Seen	
Search Devices:	Filter by model:	NEO8060 - Filt	er by IP:	to 🗌		C Refresh	
Discovered Devices:	📴 Import Syste	Add Device		Change IP:	0.100.234.16	✔ Factory reset	
Unlink Extensions							
Device Model	Description	IP Address	MAC	FW Version		Last Seen	^
NEO8060	NEO Controller	192.168.13.216	80:1F:12:CC:6A:BC	v02.27.01.29	1	07/05/2021 12:13:17	
MPS8Z	PA Mic	192.168.13.216@2		v01.01		07/05/2021 12:13:17	
NEO8060	NEO Controller	192.168.13.10	D8:80:39:5B:B5:62	√02.29.01.30		07/05/2021 12:13:17	
NEO8250E	NEO Extension	192.168.13.11	00:1E:C0:DD:47:E4	√02.29.03.00		07/05/2021 12:13:17	
NEO4500E	NEO Extension	192.168.13.12	D8:80:39:5B:D6:E3	√02.29.07.00	1	07/05/2021 12:13:17	
NEO8060	NEO Controller	192.168.13.72	D8:80:39:5B:A0:CC	v02.29.a1.30		07/05/2021 12:13:17	
VAP1	EMic	192.168.13.72@1		v01.06		07/05/2021 12:13:17	۷
							1

LDA Audio Tech - Severo Ochoa Nº 31- 29590 MÁLAGA, ESPAÑA. Tlf: +34 952028805. <u>www.lda-audiotech.com</u> / <u>soporte@lda-audiotech.com</u>



4. Do a project backup

Click on "Project" tab in the upper bar menu and then select "Save as..." to do a backup.

2	¢ 1	newProject.neo - NEO	Configurator v0.	2.5.4	4					
Γ	Proj	ject View Tools H	lelp							_
1	ß	New	: 🖊 🛃 💻	ò]				
1	Ð	Open		¢	Configuration	Powe	r Amplifier Outp	outs - Configuration		
1	×	Close			Power Amplifier Outputs	M	lute 📝 Edit	equalizer		
1	۳	Save	es	0	View	-				Zone
	đ	Save as	ones		Logs	ld	Device	Name	Zone	Volume
	0	Print				0001	NEO8060 (1)	Output #1		
10	H	Print to file				0002	NEO8060 (1)	Output #2		
	-	Pecent projects				0003	NEO8060 (1)	Output #3	2	-15 dB
P		keceni projecis				0004	NEO8060 (1)	Output #4	3	-18 dB
(0	Exit	htrollers			0005	NEO8060 (1)	Output #5	4	-20 dB
h	C	Sign off				0006	NEO8060 (1)	Output #6	5	-19 dB
5	-					0007	NEO8060 (1)	Output #7	1	-20 dB
						8000	NEO8060 (1)	Output #8		

The default path where the documents will be saved is:

C:\...\Documents\NEOc\NEOcProjects

5. Load a project backup

In the upper bar menu click on "Project". Then, click on "Open" and select the backup project previously saved.

	newProject.neo -	NEO	Configurator v0.	2.5.4							
Pro	oject View Tools	H	lelp								
D	New] 🖊 🛃 🔳	∴ .	9 🖲 🛡 🖯 😂]					
Ð	Open			Configu	uration	Powe	r Amplifier O	outputs - Configuratio	on		
×	Close		-	Power	Amplifier Outputs	M	ute 🔽 E	dit equalizer			
H	Save		es	O View		*				7000	
M	Save as		ones	Logs		ld	Device	Name	Zone	Volume	Zone Mut
8	Print					0001	NEO8060 (1) Output #1			
H	Print to file					0002	NEO8060 (1) Output #2			
	Pagant projects					0003	NEO8060 (1) Output #3	2	-15 dB	
	Keceni projecis	,				0004	NEO8060 (1) Output #4	3	-18 dB	
۲	Exit		htrollers			0005	NEO8060 (1) Output #5	4	-20 dB	
C	Sign off					0006	NEO8060 (1) Output #6	5	-19 dB	
-		_				0007	NEO8060 (1) Output #7	1	-20 dB	
						8000	NEO8060 (1) Output #8			



Click on "Tools" and then "Search devices".

newProject.neo - NEO Configurator v0.2.5.4												
Project Vie	v To	ols	Help								-	
0000		Imp	port System		9 💩 📼 🔂 😂							
😑 🖊 System	n D 💽	Exp	ort System		ration	Power	r Amplifier Outp	uts - Configuration				
	icre 🗙	Unli	ink System		mplifier Outputs	M	ute 📝 Edit (equalizer				
9	E 🔎		arch Devices			-				7000		
۲	F 🏦	Upo	date Devices Firmware.			ld	Device	Name	Zone	Volume	Zone N	
🕀 💻 💿 C	ont 🚖	Upl	oad project backup file			0001	NEO8060 (1)	Output #1				
Ċ E	ter 🖡	Dov	wnload project backup	file		0002	NEO8060 (1)	Output #2				
A		Pre	ferences			0003	NEO8060 (1)	Output #3	2	-15 dB		
		_				0004	NEO8060 (1)	Output #4	3	-18 dB		
		Exp	ort Preterences			0005	NEO8060 (1)	Output #5	4	-20 dB		
	_	Imp	port Preferences			0006	NEO8060 (1)	Output #6	5	-19 dB		
	_					0007	NEO8060 (1)	Output #7	1	-20 dB		
						8000	NEO8060 (1)	Output #8				

Inside the "Search devices" window, you must do the binding with the equipments that are inside the backup configuration (upper window) with the equipments discovered in your network (lower window). To do this, click on the button "Assign" with both equipments selected. This sequence must be repeated for each system equipment.

Then click on "Export system". The backup will be loaded on the previously selected NEO.

*	NEO Configurat	tor - Search Devic	es			×
A	ssign 🛛 🖉 l	Jnassign				
Syste	em Devices:	🚺 Export System	Add Device: NE	O8060 🔻 192.	168.0.3	Device
	Device Model	Description	IP Address	MAC	FW Version	Last Seen
01	NEO8060	NEO Controller	192.168.13.55			
03	NEO4250E	NEO Extension	192.168.13.57	00:1E:C0:DE:34:AD	√02.29.05.00	07/05/2021 12:26:57
04	NEO8250E	NEO Extension	192.168.13.51	00:1E:C0:DE:45:18	√02.29.03.00	07/05/2021 12:26:57
Sear	ch Devices:	Filter by model:	NEO8060 - Filt	er by IP:	to	C Refresh
Disc	overed Devices: nlink Extensions	💽 Import Syste	em 🕇 Add Device	ldentify	Change IP: 10.100.2	234.16 Factory reset
	Device Model	Description	IP Address	MAC	FW Version	Last Seen
	NEO8060	NEO Controller	192.168.13.55	00:1E:C0:DE:3C:0B	√02.29.01.30	07/05/2021 12:26:57
	NEO8060	NEO Controller	192.168.13.216	80:1F:12:CC:6A:BC	√02.27.01.29	07/05/2021 12:26:57
	MPS8Z	PA Mic	192.168.13.216@2		v01.01	07/05/2021 12:26:57
	NEO8250E	NEO Extension	192.168.13.11	00:1E:C0:DD:47:E4	√02.29.03.00	07/05/2021 12:26:57
	NEO8250E	NEO Extension	192.168.0.3	00:1E:C0:AF:48:C1	√02.29.03.00	07/05/2021 12:26:57
	NEO4500E	NEO Extension	192.168.13.12	D8:80:39:5B:D6:E3	√02.29.07.00	07/05/2021 12:26:57
	NEO8060	NEO Controller	192.168.13.72	D8:80:39:5B:A0:CC	v02.29.a1.30	07/05/2021 12:26:57

For further information, please see our support website https://support.lda-audiotech.com/