

VTX-15TN

The VTX-15TN is part of the directive column loudspeakers range of high quality certified according to EN 54-24 fire alarm.

Thanks to its minimalist design based on straight and pure lines are a perfect combination in any space, both outdoors and indoors.

Equipped with line transformer for 70/100V, isolation fuse, and ceramic connector. Includes regulable bracket to mounting on the wall.

Features:

- High quality column loudspeaker
- · Made of resistant aluminum
- Protected against fire. EN54-24 certified.
- Excellent sound and voice reproduction.
- · Easy mounted

Technical Specifications:

Model	VTX-15TN			
Reference	LDAVTX15TNS01			
Speaker diameter	2 x 2.5"			
Max power	22.5 W			
Nominal power	15 W rms			
Connection @ 100 V	15 W / 7.5 W / 3.75 W			
Connection @ 70 V	7.4 W / 3.7 W / 1.85 W			
SPL (Pmax / 1m)	94,5 dB +/- 1dB			
SPL (1W / 1m)	84,5 dB +/- 3dB			
SPL (1W / 4m)	72,5 dB +/- 3dB			
Frequency response (- 10 dB)	130 Hz-15 KHz			
Dispersion (-6 dB)	500Hz	1000 Hz	2000 Hz	4000Hz
	360ºH 360ºV	185ºH 145ºV	130ºH 70ºV	90ºH 40ºV
Nominal voltage	100 V / 70 V			
Nominal impedance	666 Ω / 1.33 ΚΩ / 2.67 ΚΩ			
Connection	Multipart wire and ceramic terminal. Max section: 2.5mm ²			
Thermal Fuse	115°C			
Dimensions	96 x 98 x 180 mm			
Color	White (RAL 9003)			
IP protection grade	IP54 (Type B according to EN54-24)			
Net weight	1.22 Kg			
Gross weight	1.50 Kg / 6,5 Kg (4 units)			
Packaging dimensions	215 x 165 x 165 mm / 240 x 360 x 375 mm (4 units)			







VTX-15TN


- The reference axis is perpendicular to the central point of the grid.
- The reference plane is perpendicular to the center of the reference axis.
- The horizontal plane is perpendicular to the central point of the reference plane.
- Acoustic environment employed: Normalized acoustic screen in an anechoic chamber.

Circuit diagram:

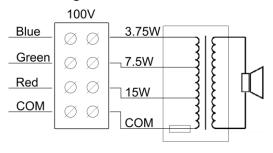


Main mechanical views:

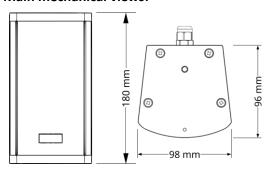



Frequency response:

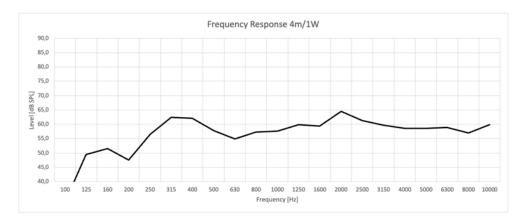

Installation:

- 1. Fix the brackets to the speaker with the included screws.
- 2. Fix the brackets to the surface and adjust the unit orientation.
- 3. Make the connection and select the desired power.